



Thank you for purchasing an Onkyo product. Please read this manual thoroughly before making connections and plugging in your new Onkyo product. Following the instructions in this manual will enable you to obtain optimum performance and listening enjoyment from your new product. Please retain this manual for future reference.

### Trademarks and Licensing



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Onkyo is under license. Other trademarks and trade names are those of their respective owners.



AuraSphere™ is a trademark of Onkyo Corporation.

AuraSphere is a listening experience technology developed by Onkyo Corporation and Sonic Emotion ag.

 
 
 


D1308-1

## PACKAGE CONTENTS

Make sure you have the following items before use.

- The number in parenthesis indicates the quantity.
- In catalogs and on packaging, the letter at the end of the product name indicates the color.

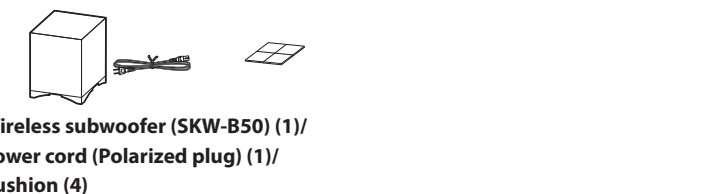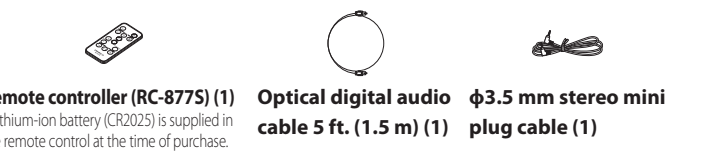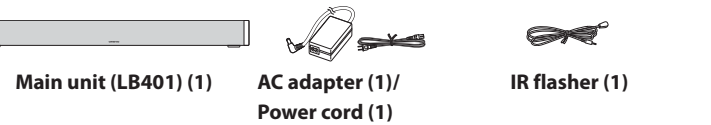

2


## PREPARATION
 
### Placement

Select an appropriate placement for your environment. Place the supplied wireless subwoofer in an appropriate place for your use environment.

- To enjoy the best sound, do not place an object on both sides of the unit. Place the supplied wireless subwoofer within the 33 feet (10 m) distance.

### Mounting to Wall

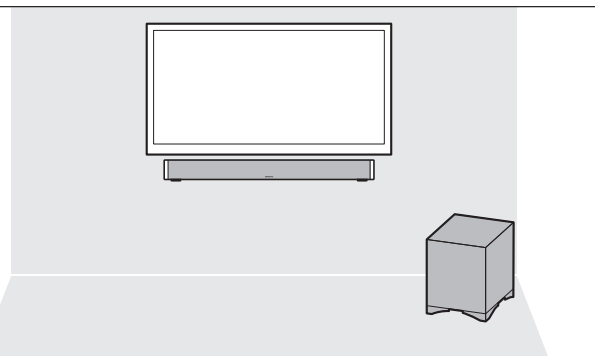



Refer all servicing to qualified service personnel.

Accessories to be prepared: Wall mounting template


3

## 1. Attach the template to the position to mount.

  - Be careful not to make a tape mark on the wall.
- Stand at a distance and check its position. Check if it is horizontal.

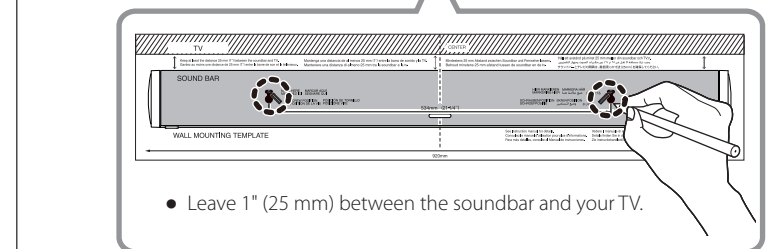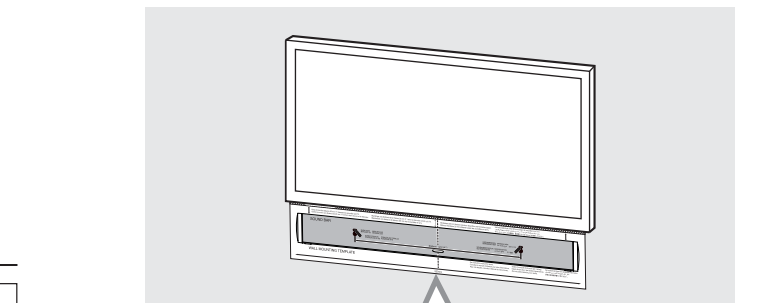



 
- Leave 1" (25 mm) between the soundbar and your TV.

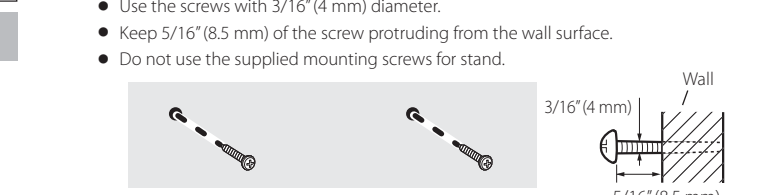

4

## 2. Mark the two screw points with a pen.

 
 
 
- Please confirm that the head of the screw is at the top of the hole.
- Do not use the supplied stands.

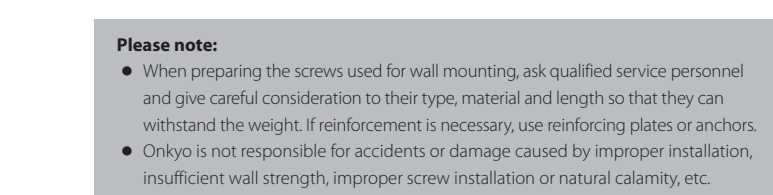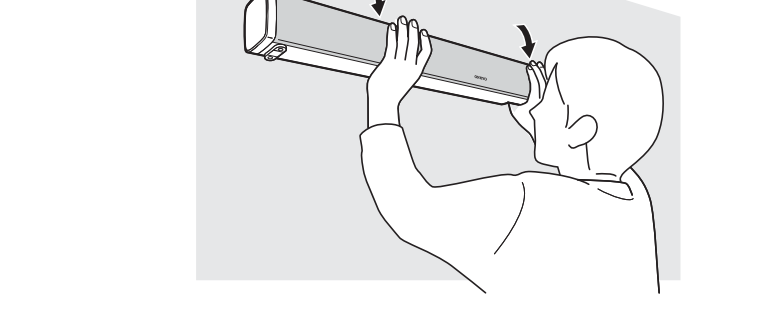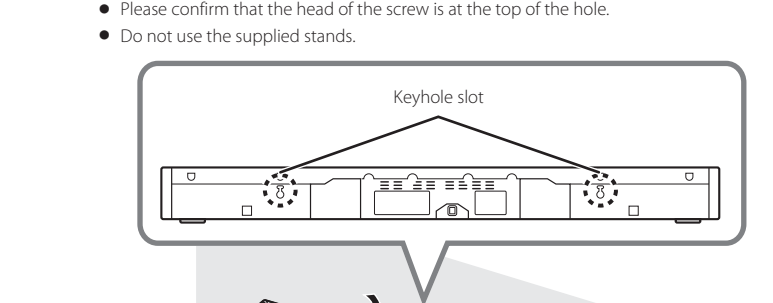

5

## 3. Remove the template and screw the screws into the wall.

 
 
 
- Use the screws with 3/16" (4 mm) diameter.
- Keep 5/16" (8.5 mm) of the screw protruding from the wall surface.
- Do not use the supplied mounting screws for stand.

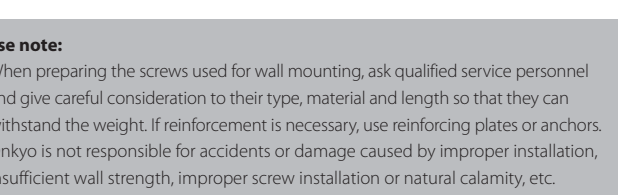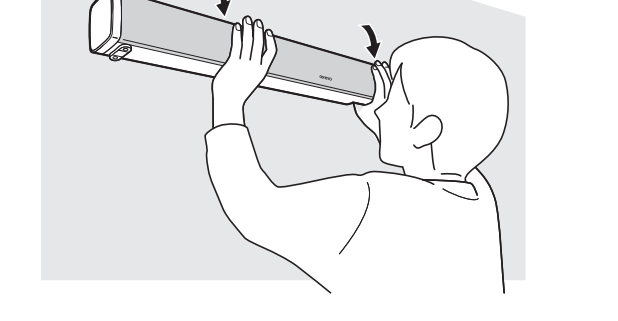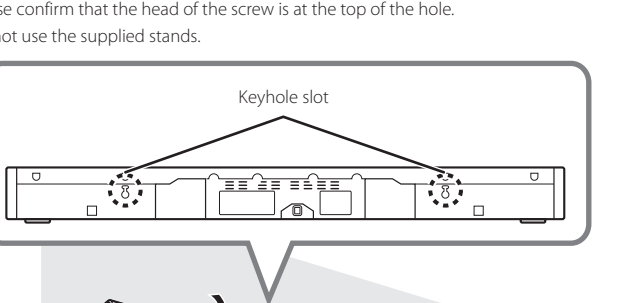

6

## 4. Connect all cables to the soundbar.

 
 
 
- Connect the TV and this unit using one of the possible connection cables.

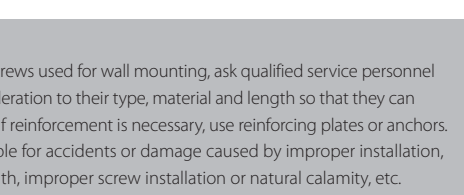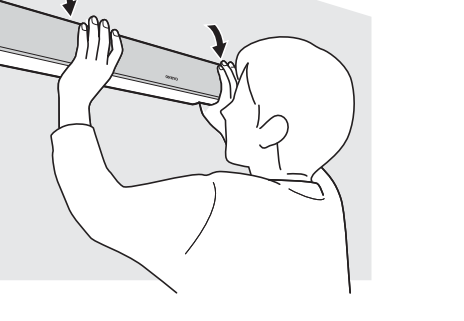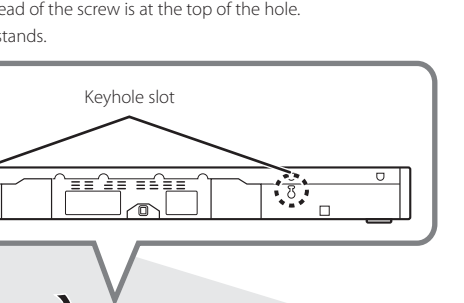

7

## 5. Insert the head of the screw into the keyhole slot of the soundbar and fix it firmly.

  
 
- Please confirm that the head of the screw is at the top of the hole.
- Do not use the supplied stands.

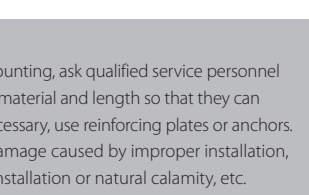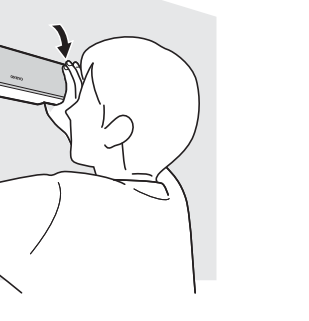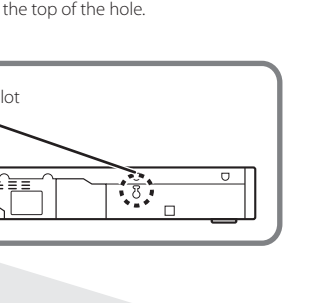

8

## 6. Connect the TV and this unit using one of the possible connection cables.

  - Connect the TV and this unit using one of the possible connection cables.

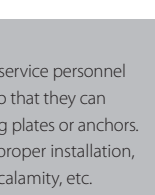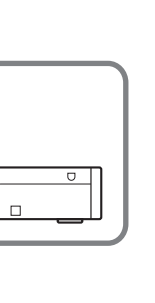

9

## 7. Turn on the TV.

 
- For details on operation, see the "BASIC OPERATION" (→ P.11).
- The unit can be operated with your existing TV remote controller. For details on operation, see the "Using TV Remote Controller" (→ P.17).



10

## 8. Turn on the soundbar.




- For details on operation, see the "BASIC OPERATION" (→ P.11).
- The unit can be operated with your existing TV remote controller. For details on operation, see the "Using TV Remote Controller" (→ P.17).

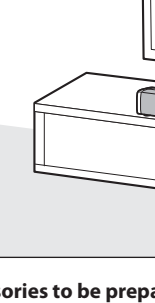

11

## 9. Adjust the volume.

  
 
- For details on operation, see the "BASIC OPERATION" (→ P.11).
- The unit can be operated with your existing TV remote controller. For details on operation, see the "Using TV Remote Controller" (→ P.17).

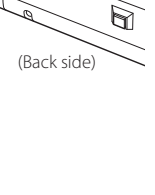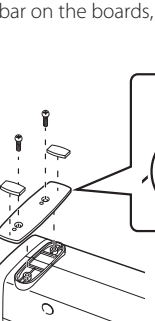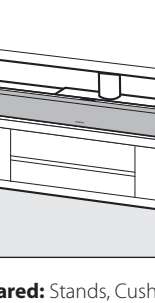

12

## 10. Adjust the input.

  
- For details on operation, see the "BASIC OPERATION" (→ P.11).
- The unit can be operated with your existing TV remote controller. For details on operation, see the "Using TV Remote Controller" (→ P.17).

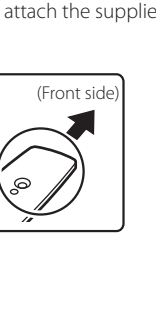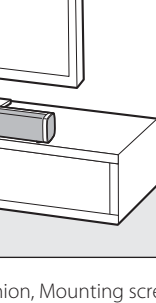

13

## 11. Adjust the subwoofer.


 
- For details on operation, see the "BASIC OPERATION" (→ P.11).
- The unit can be operated with your existing TV remote controller. For details on operation, see the "Using TV Remote Controller" (→ P.17).

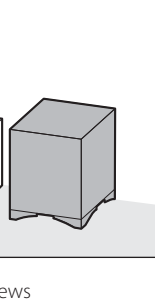

14

## 12. Adjust the sound mode.


 
 
- For details on operation, see the "BASIC OPERATION" (→ P.11).
- The unit can be operated with your existing TV remote controller. For details on operation, see the "Using TV Remote Controller" (→ P.17).

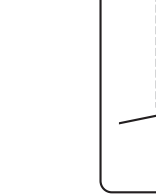

15

## 13. Adjust the power.

  
 
- For details on operation, see the "BASIC OPERATION" (→ P.11).
- The unit can be operated with your existing TV remote controller. For details on operation, see the "Using TV Remote Controller" (→ P.17).

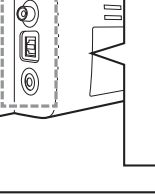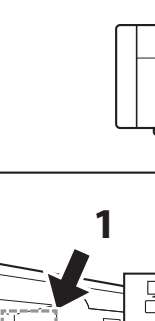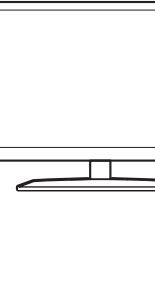

16

## 14. Adjust the volume.

 
 
- For details on operation, see the "BASIC OPERATION" (→ P.11).
- The unit can be operated with your existing TV remote controller. For details on operation, see the "Using TV Remote Controller" (→ P.17).

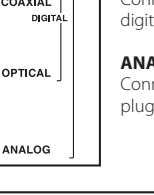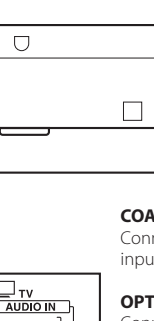

17

## 15. Adjust the input.


 
 
- For details on operation, see the "BASIC OPERATION" (→ P.11).
- The unit can be operated with your existing TV remote controller. For details on operation, see the "Using TV Remote Controller" (→ P.17).

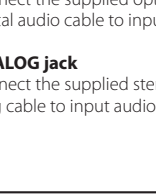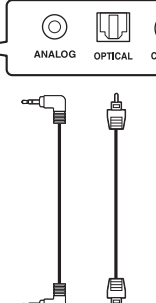

18

## 16. Adjust the subwoofer.

  
 
- For details on operation, see the "BASIC OPERATION" (→ P.11).
- The unit can be operated with your existing TV remote controller. For details on operation, see the "Using TV Remote Controller" (→ P.17).

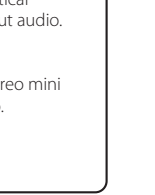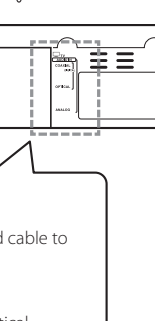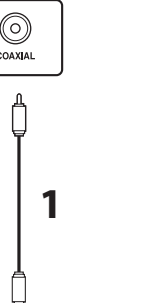

19

## 17. Adjust the sound mode.

 
 
- For details on operation, see the "BASIC OPERATION" (→ P.11).
- The unit can be operated with your existing TV remote controller. For details on operation, see the "Using TV Remote Controller" (→ P.17).

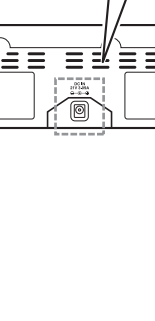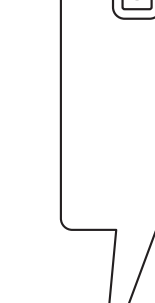

20

## 18. Adjust the power.


 
 
- For details on operation, see the "BASIC OPERATION" (→ P.11).
- The unit can be operated with your existing TV remote controller. For details on operation, see the "Using TV Remote Controller" (→ P.17).

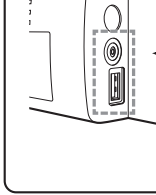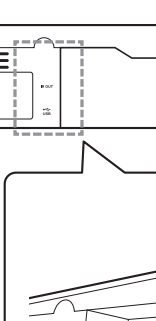

21

## 19. Adjust the volume.

 
 
 
- For details on operation, see the "BASIC OPERATION" (→ P.11).
- The unit can be operated with your existing TV remote controller. For details on operation, see the "Using TV Remote Controller" (→ P.17).

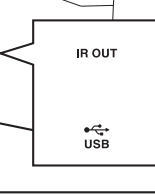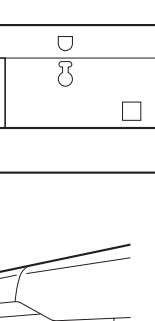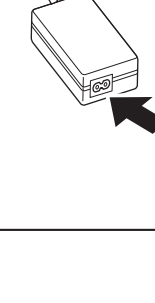

22

## 20. Adjust the input.

  
 
- For details on operation, see the "BASIC OPERATION" (→ P.11).
- The unit can be operated with your existing TV remote controller. For details on operation, see the "Using TV Remote Controller" (→ P.17).

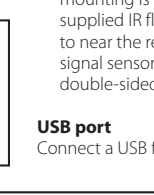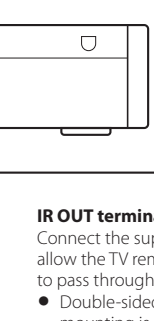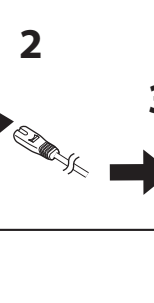

23

## 21. Adjust the subwoofer.


 
 
- For details on operation, see the "BASIC OPERATION" (→ P.11).
- The unit can be operated with your existing TV remote controller. For details on operation, see the "Using TV Remote Controller" (→ P.17).

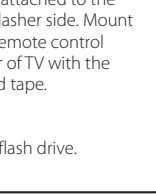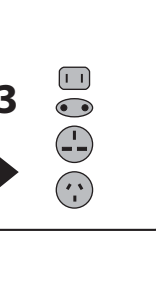

24

## 22. Adjust the sound mode.

 
 
 
- For details on operation, see the "BASIC OPERATION" (→ P.11).
- The unit can be operated with your existing TV remote controller. For details on operation, see the "Using TV Remote Controller" (→ P.17).

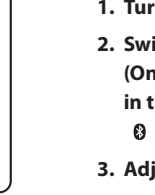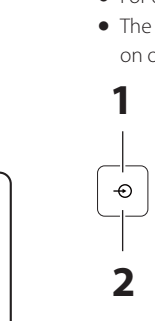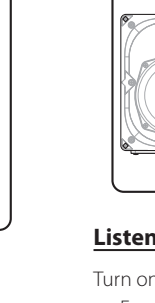

25

## 23. Adjust the power.

 
 
 
- For details on operation, see the "BASIC OPERATION" (→ P.11).
- The unit can be operated with your existing TV remote controller. For details on operation, see the "Using TV Remote Controller" (→ P.17).

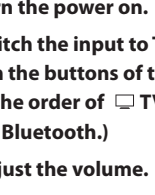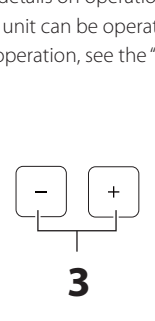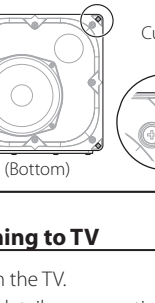

26

## 24. Adjust the volume.

 
 
 
- For details on operation, see the "BASIC OPERATION" (→ P.11).
- The unit can be operated with your existing TV remote controller. For details on operation, see the "Using TV Remote Controller" (→ P.17).

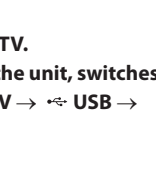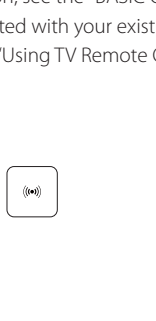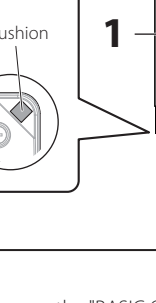

27

## 25. Adjust the input.

 
 
 
- For details on operation, see the "BASIC OPERATION" (→ P.11).
- The unit can be operated with your existing TV remote controller. For details on operation, see the "Using TV Remote Controller" (→ P.17).

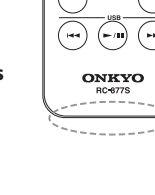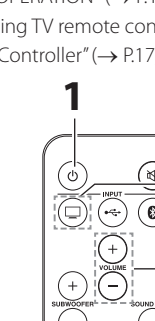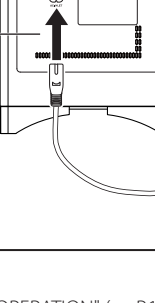

28

## 26. Adjust the subwoofer.

   - For details on operation, see the "BASIC OPERATION" (→ P.11).
- The unit can be operated with your existing TV remote controller. For details on operation, see the "Using TV Remote Controller" (→ P.17).

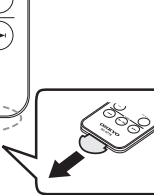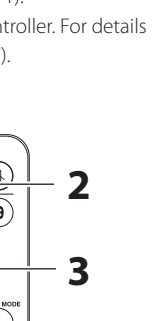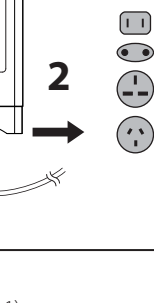

29

## 27. Adjust the sound mode.

 
- For details on operation, see the "BASIC OPERATION" (→ P.11).
- The unit can be operated with your existing TV remote controller. For details on operation, see the "Using TV Remote Controller" (→ P.17).



30

## 28. Adjust the power.




- For details on operation, see the "BASIC OPERATION" (→ P.11).
- The unit can be operated with your existing TV remote controller. For details on operation, see the "Using TV Remote Controller" (→ P.17).

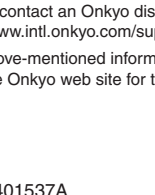

31

## 29. Adjust the volume.

 
 
 
- For details on operation, see the "BASIC OPERATION" (→ P.11).
- The unit can be operated with your existing TV remote controller. For details on operation, see the "Using TV Remote Controller" (→ P.17).

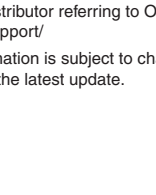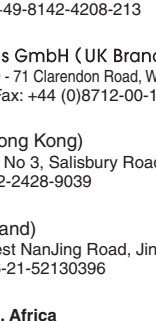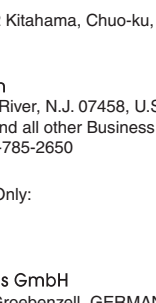

32

## 30. Adjust the input.

  
 
- For details on operation, see the "BASIC OPERATION" (→ P.11).
- The unit can be operated with your existing TV remote controller. For details on operation, see the "Using TV Remote Controller" (→ P.17).

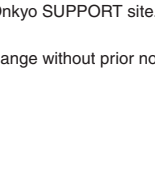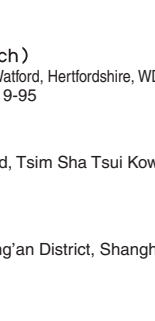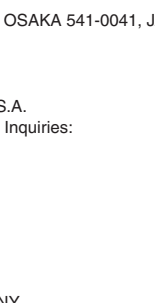

33

## 31. Adjust the subwoofer.

  
- For details on operation, see the "BASIC OPERATION" (→ P.11).
- The unit can be operated with your existing TV remote controller. For details on operation, see the "Using TV Remote Controller" (→ P.17).

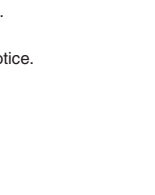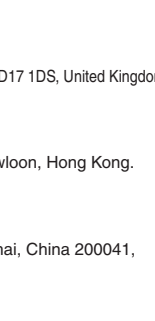

34

## 32. Adjust the sound mode.

 - For details on operation, see the "BASIC OPERATION" (→ P.11).
- The unit can be operated with your existing TV remote controller. For details on operation, see the "Using TV Remote Controller" (→ P.17).




35

## 33. Adjust the power.

 - For details on operation, see the "BASIC OPERATION" (→ P.11).
- The unit can be operated with your existing TV remote controller. For details on operation, see the "Using TV Remote Controller" (→ P.17).

# BASIC OPERATION

## Using Main Unit Controls

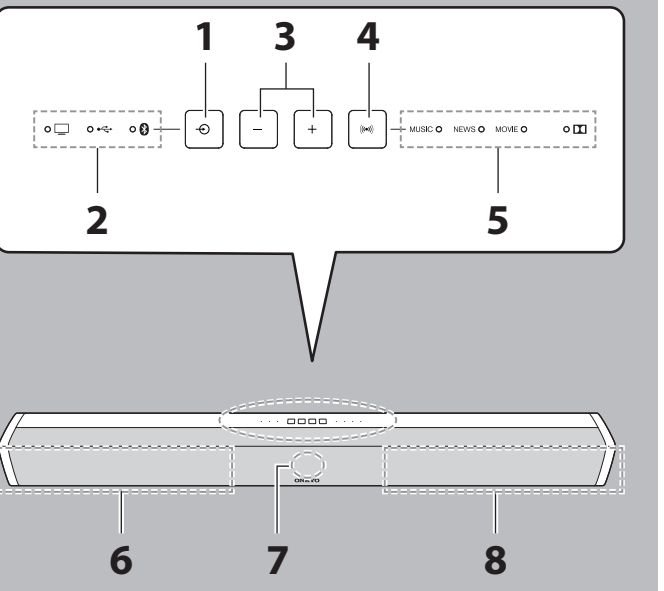

### 1. (ON/STANDBY) button/INPUT button

Switches the power on/standby. Also, switches the input source.

- **To turn the power on:** Press once.
- **To turn the standby:** Press and hold for 3 seconds. The indicators go off.
- **To input the source:** Press once to switch. Switches in the order of TV → USB → Bluetooth each time the button is pressed.

- **Auto Power On function:** The unit automatically turns on when audio signal is output from the TV. To switch on/off this function, press and hold first (ON/STANDBY) button, and then (MUTE) (+) for about 3 seconds. When this function is set to on, the (MUTE) indicator flashes once. It flashes twice when this function is set to off.
- **Auto Standby function:** The unit automatically enters the standby mode if the status with no operation and sound continues 5 minutes. To switch on/off this function, press and hold first (ON/STANDBY) button, and then (MUTE) (-) for about 3 seconds. When this function is set to on, the (MUTE) indicator flashes once. It flashes twice when this function is set to off.

### 2. INPUT source indicators

- (TV) Lights when the source is TV.
- (USB) Lights when the source is USB.
- (Bluetooth) Lights when the source is Bluetooth.

### 3. (-) (+) VOLUME +/- buttons

Allows to adjust the volume by 1 step in the 0 to 30 range.

- Pressing the (-) (+) buttons together will mute audio. The status indicator on the front of the main unit will flash. Press the VOLUME +/- button again to cancel mute.

### 4. (MUSIC) SOUND MODE button

Switches the sound mode of input sound as desired. The mode switches in the order of MUSIC → NEWS → MOVIE → MUSIC → each time the button is pressed. You can select the mode for each input source (TV, USB and Bluetooth).

- **MUSIC Mode:** Gives concert hall-like sound effect.
- **NEWS Mode:** Allows to comfortably listen news programs.
- **MOVIE Mode:** Creates powerful 3D sound effect suitable for enjoying movies.

### 5. SOUND MODE indicators

- **MUSIC** Lights in the music mode.
- **NEWS** Lights in the news mode.
- **MOVIE** Lights in the movie mode.
- (Dolby Digital) Lights when the input signal is Dolby Digital.

### 6. Left channel speaker

 
### 7. Status indicator

Lights white when the power is on. It keeps flashing during mute. It flashes just once every time volume is adjusted or the input or sound mode is changed (Only when using remote controller). It goes off during standby.


### 8. Right channel speaker

## Using Remote Controller


### How to Use Remote Controller

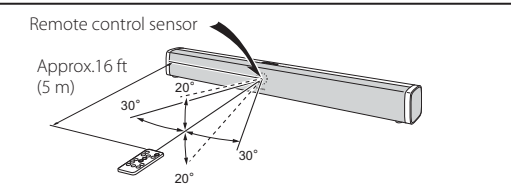

### How to Replace Remote Controller Battery

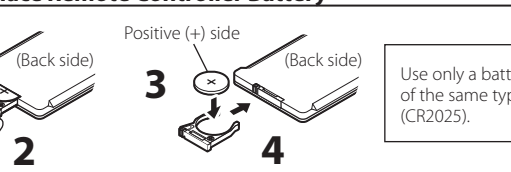 

 Use only a battery of the same type (CR2025).

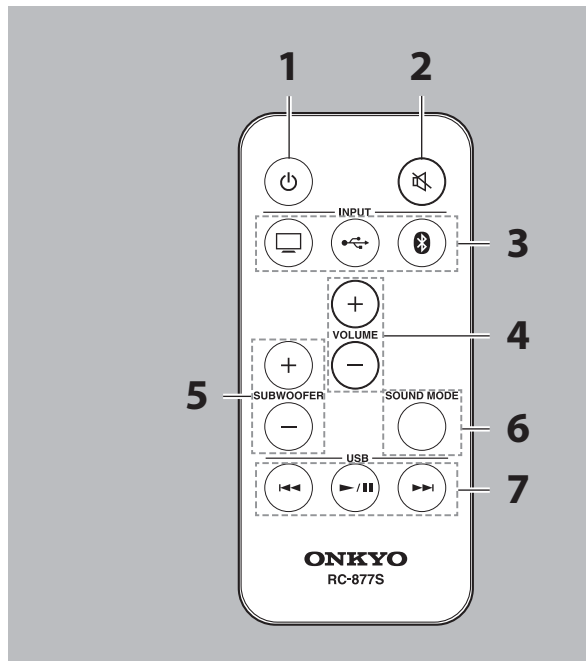

### 1. (ON/STANDBY) button

Switches the power on/standby.

### 2. (Mute) button

Turns the audio off temporarily. Press again to cancel muting.

- The Status indicator flashes when the audio is muted.
- Muting will also be canceled when the volume is changed or the power is turned off and on.

### 3. INPUT buttons

Switches the input source.

- **To play the TV sound:** Turns the TV on and press the (ON/STANDBY) button.
- **To play music from a USB flash drive:** Connect the USB flash drive and press the (USB) button.
- **To play music from a Bluetooth device:** Press the (Bluetooth) button. Refer to page 16 for connecting.

### 4. VOLUME +/- buttons

Allows to adjust the volume by 1 step in the 0 to 30 range.

### 5. SUBWOOFER +/- button

Allows to adjust the subwoofer level by 1 step in the -10 to +10 range while listening to the sound. The default setting is 0.

### 6. SOUND MODE button

Switches the sound mode of input sound as desired. The mode switches in the order of MUSIC → NEWS → MOVIE → MUSIC → each time the button is pressed. You can select the mode for each input source (TV, USB and Bluetooth).

 
- **MUSIC Mode:** Gives concert hall-like sound effect.
- **NEWS Mode:** Allows to comfortably listen news programs.
- **MOVIE Mode:** Creates powerful 3D sound effect suitable for enjoying movies.

### 7. USB operation buttons

Allows operation when the input source is USB.

- (Previous) button: Pressing once returns the audio to the beginning of the file being played. Pressing twice continuously returns it to the previous file. Then the audio will skip back to the previous file each time the button is pressed.
- (Play/Pause) button: Pressing during stop starts playback. Pressing during playback temporarily stops the audio.
- (Next) button: The audio skips to the next file each time the button is pressed.

## Playing via Bluetooth Connection

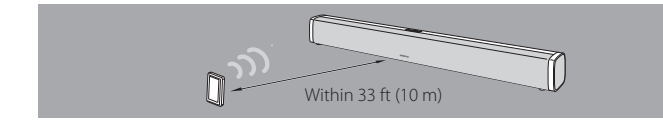

### 1. Turn the unit on.

### 2. Press (Bluetooth) button.

- The (Bluetooth) indicator flashes faster, and the pairing starts.
- The pairing will end in about 30 seconds and the indicator starts flashing slowly.

### 3. On the Bluetooth device, select the unit (Onkyo LS-B50) to make a connection.

- For details on operation, see the instruction manual of the Bluetooth device.
- If the operation does not start as normal within the 33 feet (10 m) range, get the Bluetooth device closer to the unit and retry the operation.
- If a passcode (password, passkey or PIN code) is requested, enter "0000".
- When the pairing is completed, the (Bluetooth) indicator lights.

### 4. Start playback.

- If you reset Bluetooth of this unit or removed the registration of this unit from the Bluetooth device, perform pairing (see above) again.
- To connect any other Bluetooth device, press and hold the (Bluetooth) button of the main unit to start pairing.

## Using TV Remote Controller

● **Preprogrammed functions:** This unit has been preprogrammed so that it can be operated with your existing TV remote controller. The functions that can be operated are volume control (+/-) and muting (MUTE). If you want to use other functions or cannot operate with your TV remote controller, you can use the learning function as below to enable the operation.

- The mute state can be turned over each time you press the Mute button on your TV remote controller. In such case, you can synchronize the mute status of the unit and the TV by pressing and holding the Mute button on your TV remote controller.
- To disable the preprogrammed function, press and hold first (ON/STANDBY) button, and then (MUTE) (-) for about 10 seconds. When the preprogrammed function is successfully disabled, (MUTE) indicator flashes 3 times, then any TV remote controller cannot be used to operate the unit. When you want to re-enable the preprogrammed function, perform the same operation. When the preprogrammed function is successfully re-enabled, (MUTE) indicator flashes once, then you can use any remote controller using preprogrammed function.

**To control the preprogrammed functions:** Varieties of TV remote controllers have been preprogrammed on this unit, which may lead to unintended operation from the other remote controller than your TV remote controller. In such case, press and hold first (ON/STANDBY) button and then press either volume or mute button on your TV remote controller 2 or 3 times to turn on the controlling function. When the controlling function is set to on, the (MUTE) indicator flashes twice, and then, the other remote controller cannot be operated.

 
- Controlling function may not be set to some TV remote controllers.
- To cancel the controlling function, press and hold first (ON/STANDBY) button and then (MUTE) (-) for about 10 seconds. When the controlling function is successfully cancelled, (MUTE) indicator flashes once, then you can use any remote controller using preprogrammed function.

### Learning function

You can operate the unit with a TV remote controller by assigning the functions to the buttons of the remote controller. Perform the following button operation, when the (MUTE) indicator starts flashing, direct your TV remote controller to remote control sensor of this unit and press the button to assign on the TV remote controller 3 times. When the Learning function is successfully set, (MUTE) indicator flashes twice.

Learning function	Button operation (Press simultaneously for 3 seconds)
ON/STANDBY	(MUTE) → (ON/STANDBY)
VOLUME +	(MUTE) → (+)
VOLUME -	(MUTE) → (-)

## Playing via Bluetooth Connection

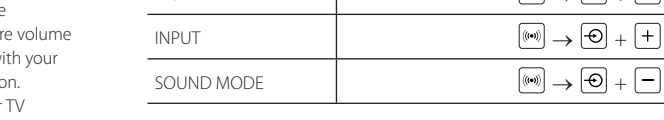

### 1. Turn the unit on.

### 2. Press (Bluetooth) button.

- The (Bluetooth) indicator flashes faster, and the pairing starts.
- The pairing will end in about 30 seconds and the indicator starts flashing slowly.

### 3. On the Bluetooth device, select the unit (Onkyo LS-B50) to make a connection.

- For details on operation, see the instruction manual of the Bluetooth device.
- If the operation does not start as normal within the 33 feet (10 m) range, get the Bluetooth device closer to the unit and retry the operation.
- If a passcode (password, passkey or PIN code) is requested, enter "0000".
- When the pairing is completed, the (Bluetooth) indicator lights.

### 4. Start playback.

- If you reset Bluetooth of this unit or removed the registration of this unit from the Bluetooth device, perform pairing (see above) again.
- To connect any other Bluetooth device, press and hold the (Bluetooth) button of the main unit to start pairing.

## Using TV Remote Controller

● **Preprogrammed functions:** This unit has been preprogrammed so that it can be operated with your existing TV remote controller. The functions that can be operated are volume control (+/-) and muting (MUTE). If you want to use other functions or cannot operate with your TV remote controller, you can use the learning function as below to enable the operation.

- The mute state can be turned over each time you press the Mute button on your TV remote controller. In such case, you can synchronize the mute status of the unit and the TV by pressing and holding the Mute button on your TV remote controller.
- To disable the preprogrammed function, press and hold first (ON/STANDBY) button, and then (MUTE) (-) for about 10 seconds. When the preprogrammed function is successfully disabled, (MUTE) indicator flashes 3 times, then any TV remote controller cannot be used to operate the unit. When you want to re-enable the preprogrammed function, perform the same operation. When the preprogrammed function is successfully re-enabled, (MUTE) indicator flashes once, then you can use any remote controller using preprogrammed function.

**To control the preprogrammed functions:** Varieties of TV remote controllers have been preprogrammed on this unit, which may lead to unintended operation from the other remote controller than your TV remote controller. In such case, press and hold first (ON/STANDBY) button and then press either volume or mute button on your TV remote controller 2 or 3 times to turn on the controlling function. When the controlling function is set to on, the (MUTE) indicator flashes twice, and then, the other remote controller cannot be operated.

- Controlling function may not be set to some TV remote controllers.
- To cancel the controlling function, press and hold first (ON/STANDBY) button and then (MUTE) (-) for about 10 seconds. When the controlling function is successfully cancelled, (MUTE) indicator flashes once, then you can use any remote controller using preprogrammed function.

### Learning function

You can operate the unit with a TV remote controller by assigning the functions to the buttons of the remote controller. Perform the following button operation, when the (MUTE) indicator starts flashing, direct your TV remote controller to remote control sensor of this unit and press the button to assign on the TV remote controller 3 times. When the Learning function is successfully set, (MUTE) indicator flashes twice.

Learning function	Button operation (Press simultaneously for 3 seconds)
ON/STANDBY	(MUTE) → (ON/STANDBY)
VOLUME +	(MUTE) → (+)
VOLUME -	(MUTE) → (-)

## Using TV Remote Controller

● **Preprogrammed functions:** This unit has been preprogrammed so that it can be operated with your existing TV remote controller. The functions that can be operated are volume control (+/-) and muting (MUTE). If you want to use other functions or cannot operate with your TV remote controller, you can use the learning function as below to enable the operation.

- The mute state can be turned over each time you press the Mute button on your TV remote controller. In such case, you can synchronize the mute status of the unit and the TV by pressing and holding the Mute button on your TV remote controller.
- To disable the preprogrammed function, press and hold first (ON/STANDBY) button, and then (MUTE) (-) for about 10 seconds. When the preprogrammed function is successfully disabled, (MUTE) indicator flashes 3 times, then any TV remote controller cannot be used to operate the unit. When you want to re-enable the preprogrammed function, perform the same operation. When the preprogrammed function is successfully re-enabled, (MUTE) indicator flashes once, then you can use any remote controller using preprogrammed function.

**To control the preprogrammed functions:** Varieties of TV remote controllers have been preprogrammed on this unit, which may lead to unintended operation from the other remote controller than your TV remote controller. In such case, press and hold first (ON/STANDBY) button and then press either volume or mute button on your TV remote controller 2 or 3 times to turn on the controlling function. When the controlling function is set to on, the (MUTE) indicator flashes twice, and then, the other remote controller cannot be operated.

- Controlling function may not be set to some TV remote controllers.
- To cancel the controlling function, press and hold first (ON/STANDBY) button and then (MUTE) (-) for about 10 seconds. When the controlling function is successfully cancelled, (MUTE) indicator flashes once, then you can use any remote controller using preprogrammed function.

### Learning function

You can operate the unit with a TV remote controller by assigning the functions to the buttons of the remote controller. Perform the following button operation, when the (MUTE) indicator starts flashing, direct your TV remote controller to remote control sensor of this unit and press the button to assign on the TV remote controller 3 times. When the Learning function is successfully set, (MUTE) indicator flashes twice.

Learning function	Button operation (Press simultaneously for 3 seconds)
ON/STANDBY	(MUTE) → (ON/STANDBY)
VOLUME +	(MUTE) → (+)
VOLUME -	(MUTE) → (-)

**The subwoofer produces no sound**

- Make sure that there is no obstacle or reflection between the soundbar and the subwoofer.
- Make sure that the pairing the soundbar and the subwoofer completes normally. (At the time of purchase, pairing has already been completed.) If the pairing is required, please perform the following operation.

### Remote Controller

**The remote controller doesn't work**

- Make sure that the battery is installed with the correct polarity. (→P.13)
- Make sure that the remote controller is not too far away from the soundbar, and that there's no obstruction between the remote controller and the soundbar's remote control sensor. (→P.13)
- Make sure that the soundbar is not subjected to direct sunshine or invertertype fluorescent lights. Relocate if necessary.

### Playing USB Memory

The unit supports USB memory formatted using FAT12, FAT16 and FAT32 file system.

- The unit is compatible with MP3 playback and following audio format is supported.
  - MPEG1 Audio Layer3 format with a sampling rate of 32, 44.1 or 48 kHz and 32 to 320 kbps bit rate
  - MPEG2 Audio Layer3 format with a sampling rate of 16, 22.05 or 24 kHz and 8 to 160 kbps bit rate
  - MPEG2.5 Audio Layer3 format with a sampling rate of 8, 11.025 or 12 kHz and 8 to 64 kbps bit rate